

6-3. Initialization

Items to initialize

The following items must be initialized for normal system operation in cases such as after the 12-volt battery is reconnected, or maintenance is performed on the vehicle.

Item	When to initialize	Reference
Power back door (if equipped)	<ul style="list-style-type: none">• After reconnecting or changing the 12-volt battery• After changing a fuse	P. 70
Maintenance data (U.S.A. only)	After the maintenance is performed	P. 501
Tire pressure warning system	<ul style="list-style-type: none">• When changing tire pressure (such as when changing traveling speed, load weight, etc.)• When changing the tire size	P. 533